

MJ-360

Micro-Jet Torch

INSTRUCTIONS & WARNINGS

Ignition & Extinguishing the Flame:

1. To push the Push Button to ignite MJ-360.(FIG.1)
2. To set continuous burn, while pressing the Push Button with flame ignited, switch the Hands-free Lock upward to HOLD position.
3. To stop continuous burn, slide the Hands-free Lock downward.
4. To Control flame length, slowly move the Flame Control Knob to “⊕” or “⊖”.

Refilling Gas:

1. Before refilling, make sure the flame is fully extinguished and the torch is cooled down.
2. Refill the torch in a well-ventilated area away from any source of ignition and away from other people.
3. Place the torch in an upside down position when refilling.
4. Insert the nozzle of the butane canister into gas refilling valve.
5. Press down on the canister until the gas starts to over flow and wait for 10 minutes before use.



FIG.1

WARNING:

- KEEP AWAY FROM CHILDREN!
- CONTAINS FLAMMABLE GAS UNDER PRESSURE. BE SURE FLAME IS OUT AFTER USE.
- MUST COOL DOWN AFTER 5 MINUTES OF CONTINUOUS BURN.
- DO NOT TOUCH FLAME NOZZLE WHILE IN USE OR BEFORE COOL DOWN.
- KEEP IGNITED LIGHTER AWAY FROM FACE OR CLOTHING.
- DO NOT STORE ABOVE 120°F / 50°C IN TO PROLONG SUNLIGHT.

CAUTION:

THE TORCH FLAME IS ALMOST INVISIBLE IN DAYLIGHT, OR IN STRONG LIGHT.

