

 
**iroda**

**MICRO JET  
LIGHTER  
AT-2057CR**

Professional Butane Jet Lighter

**Instruction Manual**

READ INSTRUCTIONS AND WARNINGS BEFORE USE

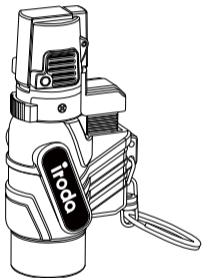


## IMPORTANT SAFETY INSTRUCTIONS

### Warnings:

- DO NOT refill, ignite or use near open flame, heater, furnace or combustible materials.
- KEEP AWAY FROM CHILDREN.
- Be extremely careful as the torch flame is almost invisible in daylight or under strong light.
- Do not touch the flame cover during use or before sufficient time has passed for cooling.
- Do not use continuously for more than five (5) minutes.
- Always be sure the unit is cool before storing.
- If your lighter malfunctions do not try to repair. Contact your dealer or online support for help.
 
## DESCRIPTION

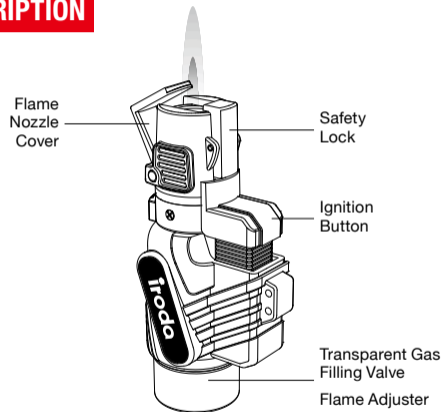

## HOW TO USE MICRO JET LIGHTER AT-2057CR

### REFILLING

Fig.1

- Use only high-quality butane gas.
  - Refill in a well-ventilated area away from any ignition source and other people.
1. Hold butane canister upside down when filling (Fig. 1)
  2. Firmly press canister nozzle into **Gas Filling Valve**.
  3. Release canister when gas starts to overflow.  
(Gas overflow during refilling is normal and does not indicate a leak)
  4. Wait for a few minutes before use.

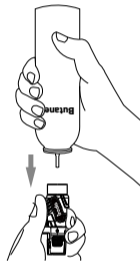 


Fig.1

### IGNITION

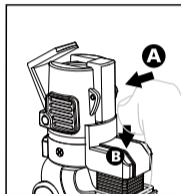 


Fig.2

1. Firmly press the bottom of the **Safety Lock "A"** with the tip of your thumb. The lower extremity of the safety lock should tilt inwards indicating the lighter is in unlock mode. (Fig. 2)
  2. While holding in the **Safety Lock** push down on the **Ignition Button "B"**.
- You must do both actions at the same time to ignite the lighter.
  - After use, push the **Flame Nozzle Cover** back into the locked position.

## FLAME ADJUSTMENT

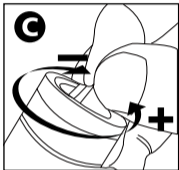 


Fig.3

- The **Flame Adjuster (C)** is located at the bottom of the Lighter.
1. Flip out the handle of the **Flame Adjuster** and turn counterclockwise (toward "+") to set a higher setting. Once lit, you can turn the **Flame Adjuster** clockwise or counterclockwise to set to the desired length of flame. (Fig. 3)

## TROUBLE SHOOTING

To reduce the risk of personal injury, property damage, or damage to your **MICRO JET LIGHTER AT-2057CR**, do not attempt to repair the unit body.

PROBLEM	PROBABLE CAUSE	HOW TO CORRECT
Cannot press down on the ignition	a. Safety lock not fully disengaged b. Previous use was over 5 min causing the lighter to overheat.	a. Re-read IGNITION steps b. Wait until lighter has cooled down
Does Not Ignite / No Flame	a. Empty Gas Tank b. Flame adjuster set too high or too low. c. Pushing on/off ignition switch too fast.	a. Refill with butane fuel b. Adjust control lever to a higher or lower position. c. Re-read IGNITION steps

## SPECIAL WARNING

- This product, when used for soldering and similar applications, produces chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
- Department of Transportation Hazardous Materials Regulations forbid the carriage of butane or other flammable gas products on passenger aircraft. Do not pack this item or any other flammable gas item, in any checked or carry-on baggage.

## SPECIFICATIONS

Dimension	H - 76 mm (3 inches)
	L - 39 mm (1.5 inches)
	W - 25 mm (1 inch)
Weight (W/O Gas Filled)	46 ± 5 g
Fuel	Butane
Running Time	Approx. 30 Minutes (Mid. Setting)
Flame Temperature	1300°C / 2400°F (Blue Flame)



This appliance may be filled with any cartridges marked “Butane” complying with EN 417.

**Warning:**

- Use outdoors only or use in well ventilated areas.
- Read the instructions before using the appliance.

**CAUTION:**

- Accessible parts may be very hot. Keep young children away from the appliance.



The logo for 'iroda' features the word in a bold, lowercase, sans-serif font. The letter 'i' is black with a red dot above it. The letters 'r', 'o', 'd', and 'a' are solid black. The overall style is clean and modern.

**iroda**

[www.pro-iroda.com](http://www.pro-iroda.com)